

## Axon Troubleshooting Tips

Problem	Solution
Won't power on	Verify fixture is plugged in to an appropriately-rated power source
	Check power cord wiring.
	If the unit's previous shutdown was done remotely, you may have to manually turn on the power switch located behind the right front cover.
Powers on but no image	Make sure a video output is physically attached to the Axon server, and that the video feed is active.
Powers on but does not display the CMA screen.	An active display device must be attached to <b>both</b> DVI ports before booting up the system to view the CMA on a local unit when you start up. When only one port is connected, it defaults to display the graphics engine output and will not display the CMA screen.
Fixture behaves erratically or won't respond to DMX control	Verify that the last unit on the DMX link is properly terminated
	To control Axon with DMX, you must first enable DMX through the CMA